

0107. 0238-0243. 0573. 2287. 3312

MADE IN CHINA

Univers	al A/C remote		6 974246 330396
Brand		Brand	Model Code
ALPIN	0252, 0253, 1788, 3325	LIANGYU	0233, 0451, 1257, 3523
AUCMA	0288-0296, 0462, 2337, 3534		0527, 0532, 1556, 2070
AUX	0297-0300、0451、0474、0475、2860、3370		0255, 0471, 0472, 1496, 3543
BANSHEN	0264、1288、3848		0234-0237、0465、2283、3820
BOERKA	0383、0434、0436、0437、3967	MICOM	0415、1439、2463
CARRIER	0203-0209、0456-0458、0482-0486、0563-0565	MIDEA	0260-0265、0526、1284、2310
CHANGHONG	0301-0308、1325、2353、3982	MITSUBISHI	0001-0045, 0476-0479, 0522, 0523, 0568, 0582, 3628
CHIGO	0379-0382、0489、0515、1916、2940	NORITZ	0431、1455、2468
CHOFU	0184-0187、1721、3771	PANASONIC	0138-0154、0483、0490-0492、2019、3738
CHUNLAN	0345-0350、0450、0453、3932	National	0138-0154、0483、0490-0492、2019、3738
CORONA	0155-0163、0459、2206	PANDA	0378、0890、1405
CONROWA	0377、1913、3961	PHILCO	0210、0211、0487、0488、3795
CONSUL	0463、0975、2511	PROTON	0421-0423、2507、3593
DAEWOO	0203-0209、0406、2256、3990	RAYBO	0362-0367、1387、2925
DAIKIN	0171-0183、0566、0577、2220、3758	ROWA	0369. 0438. 0439. 0494. 0527. 0531. 1975. 3510
DOCTOR	0221、0449、2497、3850	Sabro	0435、0506-0508、2483、3579
DONGBAO	0355-0361、2403、3430		0212-0215、1238、3285
	0413、2461、3997	SAMPO	0424-0426、1448、3497
Electrolux	0216-0220、0569、1753、3802 0498、0499、0528	SAMSUNG	0188-0196、0516、0518、2239、3772 0046-0095、0559、0529、0530、1090、3678
FEDDERS FRESTECH	0277、0519、0520、1813、3349	SANYO	0254、0470、2006、3838
FUJITSU	0127-0137, 0464, 0552-0554, 1158, 3720	SHANGLING	0384-0388、0444、0445、3969
FUNAL	0430, 0481, 1966, 3502	SHARP	0096-0106、0525、1633、2150、2656
GALANZ	0371, 0372, 0521, 1395, 2933, 3956	SHINCO	0351-0354、0454-0456、2912
General	0639, 1152, 2180, 3711	SHUANGLU	0376、0404-0407、0480、3476
GLEE	0398, 0399, 2446, 3983		0288, 0800, 1311
GOLDSTAR	0201、0466-0469、2515	SONGGE	0428、0429、1965、2988
GREE	0309-0316、0482、0512、0513	SOVA	0409、0410、2457、3482
HAIER	0266-0272、0453-0455、3852	SUMMER	0427、1963、2485、3499
HISENSE	0332-0335、0517、1869、2895、3917	SUNDURG	0257、0505、1793、3841
HITACHI	0118-0126、1148、2679、3709	SWAN	0434、0477、0516、0524、0946、1556
HUABAO	0336-0344、1879、3409、3926	TADIRAN	0246-0251、2295、3833
HUAKE	0408、1432、2765、3992	TATUNG	0419、0420、1955、2979
HUAMEI	0402、0460-0465、1997、3533	TCL	0273-0281、0476、0493、0570、1299、3347
HUALING	0317-0325、0452、2500、3906	TECO	0256、0473-0475、1280
HUIFENG	0370、0882、2420、3954	TIANDI	0415、0927、1538、3999
HUIKANG	0368、0441-0443、2416、3514	TOSHIBA	0107-0117、0479、0561、0562、1647、3181
HYUNDAI	0202, 0433, 0480, 1226, 2250	TRANE	0227-0232、0739、2276
JDC	0373、0440、1397、3000	UNI-AIR	0222-0224、0450、3522
JINDA JINSONG	0414、1950、2536 0389-0391、0446-0448、3462	WEILI	0393-0396、2442、3979 0164-0170、0502、2038、3752
JOHSONG	0245、0492、2028、3829	WINIA	0481、0550、1505、3553
KANGLI	0374, 0375, 2935, 3958	XILENG	0411, 0412, 2460, 3995
KELON	0282-0287、0473、0485-0488	XINLE	0400, 0401, 2960, 3985
KLIMATAIR	0225, 0226, 0452, 1988, 3810		0403、1427、3475
KLIWATAIK	0220, 0220, 0402, 1900, 0010	MINOZI(IMIN)	0400. 1427. 3470

QUNDA KT-9018E

Appearance

Patent

Unique features

A pioneering work for A/C remote -Input

code directly by digital key

of, "Intelligent cool" and "Intelligent heat"



MODE



Current air flow direction display Timer Time/Code Model code

Control 99,99 percent Air-conditioners in the world

QUNDA

KONKA

KT-9018E Universal A/C remote user guide

Product Description

0416-0418、1952、2465、3539 0397、0457-0459、2507、3981

KT-9018E is using the patent of shell design and code setting that invented by our researchers. You can press the numeric buttons (0-9) for the code required directly, visual and convenient, quick and efficient. It has clock accurate, timer on and off, code memory and also has original function of "intelligent cool" "intelligent heat". So it is convenience for using.

YORK

Preparation

The remote control can be used after setting. Pull side cover of remote control down, put 2 AAA (VM-4, R03) batteries as per polar indicated on the battery cabin.

Patent coding set up

- 1. Find out the codes that required from the code table. There are many groups' codes of each brand. Please try the first group, if it does not operate your equipment, try the second, and do like this until the codes can operate your equipment. Ex: AUCMA, you can choose 0288, if it does not work, please try the 0289etc.
- the 0289etc.

 2. Press the SELECT button, the code on the LCD blinks once. Enter the 4 digit code in turn. Ex:0288, press the "0" button, "0" stop blinking, the last three number blinking, then press the "2" button., the last two number blinking, and press the "8" button, the last number blinking, finally press the last number "8", all of the 4digit code "0288" stop blinking, code entry is complete now. The remote control confirm the code automatically, and then these numeric button get back original function normally. You can operate your air conditioner on, try the other functions of your equipment, if do not operate your equipment, please choose the next group of code until all the functions can work. The remote control is 4000 codes in one, so it is invalid when the code greater than 4000. the code greater than 4000.

Auto-search by one key

If you do not know the brand of your air conditioner, or if your brand is not listed in the code cable, try searching for your code as follow:

1. Put the remote control aim at your air conditioner, press the "SELECT" button for 5 seconds and release, the remote control is entering the autosearch status, launch the signal continuously, the code blinking and increasing. When the air conditioner receive the signal, and send a BUZZER, press any layer to confirm

any keys to confirm.

2. After your air conditioner on, try the other functions of your equipment, if do not work, repeat these steps until it can operate your equipment.

Using of "intelligent cool" and "intelligent heat"

In the summer, press the "intelligent cool" only, the air conditioner will be cooled immediately. In the winter, press the "intelligent heat" button only, the air conditioner will be heated immediately. In both status, the air conditioner will let the heating and cooling in a comfortable temperature automatically, and the fan and swing are automatically. At the same time, it also can adjust the temperature by the "+""-" buttons according to requires. These two intelligent keys suit the children and the old especially.

Clock set up

1.Press the "clock" button, clock signal is blinking.
2.Press the "+" "-" of the "time" button, setting to the current time.
3.Press the "clock" button again, stop blinking, the time setting is complete.
(If you did not press the "clock" button, it can be setting automatically after 5 seconds)

Temperature

Timer on

You can set timer on, only turning off your air conditioner. 1.Press the "TMR on" button, the LCD displays the clock signal ⊕ and time

blinking.
2.Press "TIME/code" "+" "-" button, adjust the time when you want to make the air conditioner turn on automatically.
3.Time blinking and it will stop after 5 seconds. The LCD displays current

time @ and clock signal. Now setting is complete.

You can set timer off, only after turning on your air conditioner. 1. Press the "TMR off" button, the LCD displays the clock signal 🕑 and time

1. Press the "IMR of button, the LCD displays the clock signal Q and time blinking.
2. Press the "TIME/CODE" "+" or "-" button; adjust the time when you want to make the air conditioner turn off automatically.

3. Time blinking, and it will stop after 5 seconds. The LCD displays current time ♠ and clock signal. Now setting is complete.

Note

1. If you press TIMER ON/OFF twice continuously, timer is deleted.
2. After timer setting is finished, you should make the remote control's emit directs toyour air conditioner's receiving location in available distance. If not, the settingis deleted.
3. If you want to see the timer, you should press the TIMER ON/OFF key, the LCDwill display the time and after 5 seconds it will display current time.

Attention

1. If it is not used for a long time, remove the battery to avoid leakage liquid of the battery to damage the machine. When the LCD looks dim, please change batteries. (New and old batteries can not be used together) After the batteries are replaced every time, it is not necessary to set model code again.

2. As usual the LCD only display the time when pressing model codes "Enter" button, you can find the code and it is showed on LCD. After 5 seconds it returns time.

3. Check carefully that there is no remora between remote controller and Air conditioner when the time on/off doesn't work. Because the operation is effective only when the air conditioner receives the timer on/off signal from remote controller.

4. The manufacturer keeps the right to change the parameter and function of product.

Technical Parameters

Controllable distance: Large than 8 meters Power supply voltage: DC3V

Battery model: Battery AAA(UM-4、R03)*2

Dimension: L115mm*W46mm*D21(15)mm Weight: Approx.50g(excl. the batteries)