


QD-L010 Smart learning remote user's manual

Product description

QD-L010 smart learning remote can almost learn all the remote controls of set-top boxs/IPTV/Satellite TV/DVD/TV. With upgrade of version, its learning function will be more powerful

A set of player name stickers is attached with this learning remote. You can remark 8 kinds of devices clearly. With the button light, the users can know which player is under control.

- 10 kinds of devices remote control learning function
- Copy function for all the pages. (The copy cable needs to be purchased separately.)
- 10 LED lights indicating function

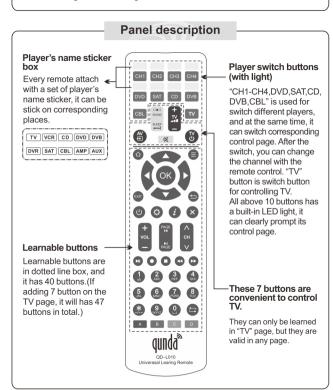

Battery installation

- Open the battery cover, input the batteries according to the positive and negative poles shown in the box.
- After inputting batteries, press any button and one of 10 buttons will be blinking, which shows the battery installation is correct, otherwise, you need to check the battery power and polarity.
- 3. Don't mix-use the old battery and new battery. You'd better not use 1.2V chargeable battery.
- 4. if it is not used for a long time, please take out the battery to avoid the leakage liquid damage.

Learning steps

1. Suppose CH1 player is TV, we can make TV remote learned on CH1 page.

(1) Make the front end of TV remote aim at the front end of this learning remote, and the spacing is 1cm.



Learning remote

the spacing is 1cm

TV remote

(2) Press and hold buttons "EXIT" and "CH1" simultaneously. After 3 seconds, "CH1" button light will change from slight light to bright light and keep light, then you should release buttons. Now this remote has entered into the learning status of CH1 page.






Learning remote

TV remote

(3) After entering into the learning status, suppose learning the confirmation key of TV remote firstly. Press "OK" button of the learning remote, and "CH1" button light will flash slowly, which means you can start learning confirmation key of TV remote.






Learning remote

TV remote

(4) Press "OK" button of TV remote, and release the button after about 1 second. (For some remotes, just press the button and release it quickly.) "CH1" button light will flash quickly and keep light, which means "OK" button of TV remote has been learned successfully.





Learning remote

TV remote

- (5) Repeat step(3)&(4), press other learnable buttons of the learning remote, then press corresponding buttons of TV remote. According to above steps, you can make the learning remote learn all buttons of TV remote.
- (6) After finishing TV remote buttons learning, press "CH1" button again to exit from learning status of "CH1" page, and the button light goes out, learning is complete.





Learning remote

TV remote

(7) After finishing "CH1" page learning, you can test whether this learning remote can control your TV, and check whether all the function buttons are learned successfully. If some buttons can not work normally, you just need to enter into the learning status of "CH1" page, learning the abnormal buttons again.

2 CH2-CH4 DVD SAT CD DVB CBL page learning

This 8 pages can be learned according to the remotes of different players, and the learning way is the same with "CH1" page. For example, after entering into "CH2" page learning, press "EXIT" and "CH2" until "CH2" button light changes from slight light to bright light and keep light. And so on, for learning way of other pages.

3. TV page

7 buttons like "\vec{\textit{W}}", " "\vec{\textit{M}}" + / \vec{\textit{M}}" = "... can only learn on "TV" page. Learning way: Press and hold "EXIT" and "TV" buttons simultaneously until "TV" button light changes from slight light to bright light and keep light. Besides 7 buttons on "TV" page, 40 buttons in the below still can be learned. Attention: 7 buttons like "\vec{\textit{W}}", " "\vec{\textit{M}}" + / \vec{\textit{M}}" ... are valid in any control page and no need to switch to TV page, which can make you control TV easily and conveniently.


4. Copy function between pages

Suppose the remotes of "CH2" player and "CH1" player is completely the same, you just need to make "CH1" page learning contents copied into "CH2" page. Operation way: press and hold "CH1" and "①" buttons until "CH1" button light changes from slight light to bright light, then release buttons. Press "CH2" button again and release quickly, the button light will flash continuously. Copy is finished when the button light goes out.

5. Copy function between remotes

When the first remote has learned the control code of all access devices, you can use the copy function to make the first remote(parent remote) copied into the blank remote. Attention: 10 pages participate the copy. Make the parent remote without battery and put batteries into blank remote, and use the cable to connect the parent remote and blank remote. Pressing "5" and "0K" buttons on the blank remote, some button lights will change from slight light to keep light. Release these two buttons, and press "OK" button again, the indicator light will flash and start to copy. The indicator light will go out after finishing the copy, then disconnect.

parent remote Blank remote



Technical parameters

Learning ability: 10 kinds of remote *40 learnable buttons on each page

Control distance: larger than 10 meters Battery: Battery AAA(UM-4, R03) *2

Dimension: 216*54*25mm

Weight: Approx. 100g(excl. batteries)

Packing components

Item	Quantity	Unit
Remote control	1	pc
User's manual	1	pc
Name sticker	1	pc

Manufacturer

Name: QUNDA Control Technology (Jiangsu) Co., Ltd.

Address: No.888 Longgiao Road, Wujiang District, Suzhou, China

Post code: 215200 Web site: www.qunda.com

★ The final explanatory right is reserved this company. Any alteration on the design and model will not be further notified.

